



Mississippi University for Women

Spring 2017

EPSON 1430WI Quick Guide

 
 
The Epson Interactive Whiteboard does not require a PC for use. The device has the ability to project from other devices such as tablets, smartphones, USB drives, and the built in Whiteboard feature.

1. Turn the EPSON IWB on or off.
2. Capture the currently projected image.
3. USB-B port for connecting your laptop to the EPSON IWB.
4. Select Whiteboard Mode. This button will also power on the EPSON IWB if it is powered off.
5. Select from the available source inputs.
6. Save the currently projected image.
7. The print function is not available at MUW.
8. Connect a USB flash drive to the EPSON IWB.



Using the Interactive Whiteboard

1. Select the Whiteboard button option on the EPSON button panel. The display will turn white.
2. Choose an interactive whiteboard marker from the storage container and power it on via the button on the side of the marker.
3. Press the marker to display to begin using the whiteboard.

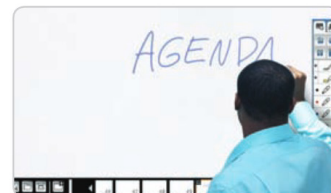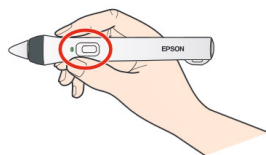



















 







Mississippi University for Women

Spring 2017

EPSON 1430WI Quick Guide

Interactive Whiteboard functions

An on-screen toolbar will appear once you begin writing. These toolbar options can be used to control most functions of the EPSON IWB.

	Switch to annotation mode. Select this option to annotate over your selected source input.		Write or draw free-form lines with custom pen
	Switch to whiteboard mode. The screen will turn white.		Change highlighter pen colour and width
	Undo the last annotation		Write or draw free-form lines with transparent highlighter pen
	Redo the last undo		Black pen (fine point on left, thick on right)
	Select all objects in a rectangular area		Red pen (fine point on left, thick on right)
	Select all objects in a freehand area		Blue pen (fine point on left, thick on right)
	Turn the pen into a draggable pointer		Eraser (thin width on left, thick on right)
	Capture the selected area as an image		Clear all content on page
	Insert a .jpg or .png image from a thumbdrive or network folder		Displays the current colour and mode for both interactive pens
	Insert a circle, square, triangle, or other shape		Hide the toolbar after each annotation
	Change custom pen colour and width		Close the toolbar
	Switch to Computer Interactive Mode		Switch to PC Free Annotation Mode




Mississippi University for Women

Spring 2017

EPSON 1430WI Quick Guide

Computer Interactive Mode

The EPSON IWB can be used to control computer mouse functions for the room's Desktop PC.


Swap from PC Free Annotation Mode to Computer Interactive Mode by selecting the Computer Interactive Mode icon () on the on-screen toolbar, then use the whiteboard marker as you would a computer mouse. Left click by tapping the marker on the display, and right click by holding the pen button as you tap on the display.

USB storage functions

Save content to a USB flash drive

1. Connect a USB flash drive to the USB-A port located on the EPSON button panel.
2. With the content you wish to capture displayed on the EPSON IWB, either select the Save icon on the on-screen toolbar, or select **Save** on the EPSON button panel. The Save menu will appear on the display.
 - Use an interactive marker to enter a file name via the on-screen keyboard.
 - Select a Save location
 - Select a file format. The available options are PDF, PNG, and EWF.
 - Select **Save**.

Show content saved to a USB flash drive

1. Connect a USB flash drive to the USB-A port located on the EPSON button panel.
2. Select the Insert Image icon () from the on-screen toolbar to display the Load menu.
3. Select a JPG, PNG, EWF, or PDF file to display it.